


Single Engine Single Station Top Mount Control

New	No.	Part No.	Part Name	Qty	KIT(67000-98L00)
☆	1	67200-98L00	R/CON ASSY, SINGLE TOP MOUNT	1	1
☆	2	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	1	1
		33925-98L00	CUSHION, BCM	1	1
		36775-98L00	HOLDER, BCM (F)	1	1
		36776-98L00	HOLDER, BCM (R)	1	1
☆	3	33926-98L00	RESISTOR, TERMINAL	2	2
	4	36625-98J10	WIRE ASSY, BATTERY	1	1
	5	36623-98L00	HARNESS ASSY, BCM NO.1 SNGL	1	1
	-	09403-13402	HARNESS CLAMP	10	10
☆	6	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1	-
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ		
		37100-98L00	PANEL ASSY, MAIN SWITCH		
		37803-98L00	PANEL ASSY, EMERGENCY SW	*	-
☆	7	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	-
☆	8	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	1	-
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)		
☆	9	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	**	-
☆	10	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**	-

* Part is required when installing 37100-98L00

** Part is required when harness needs to be extended

SINGLE ENGINE - SINGLE STATION FLUSH MOUNT

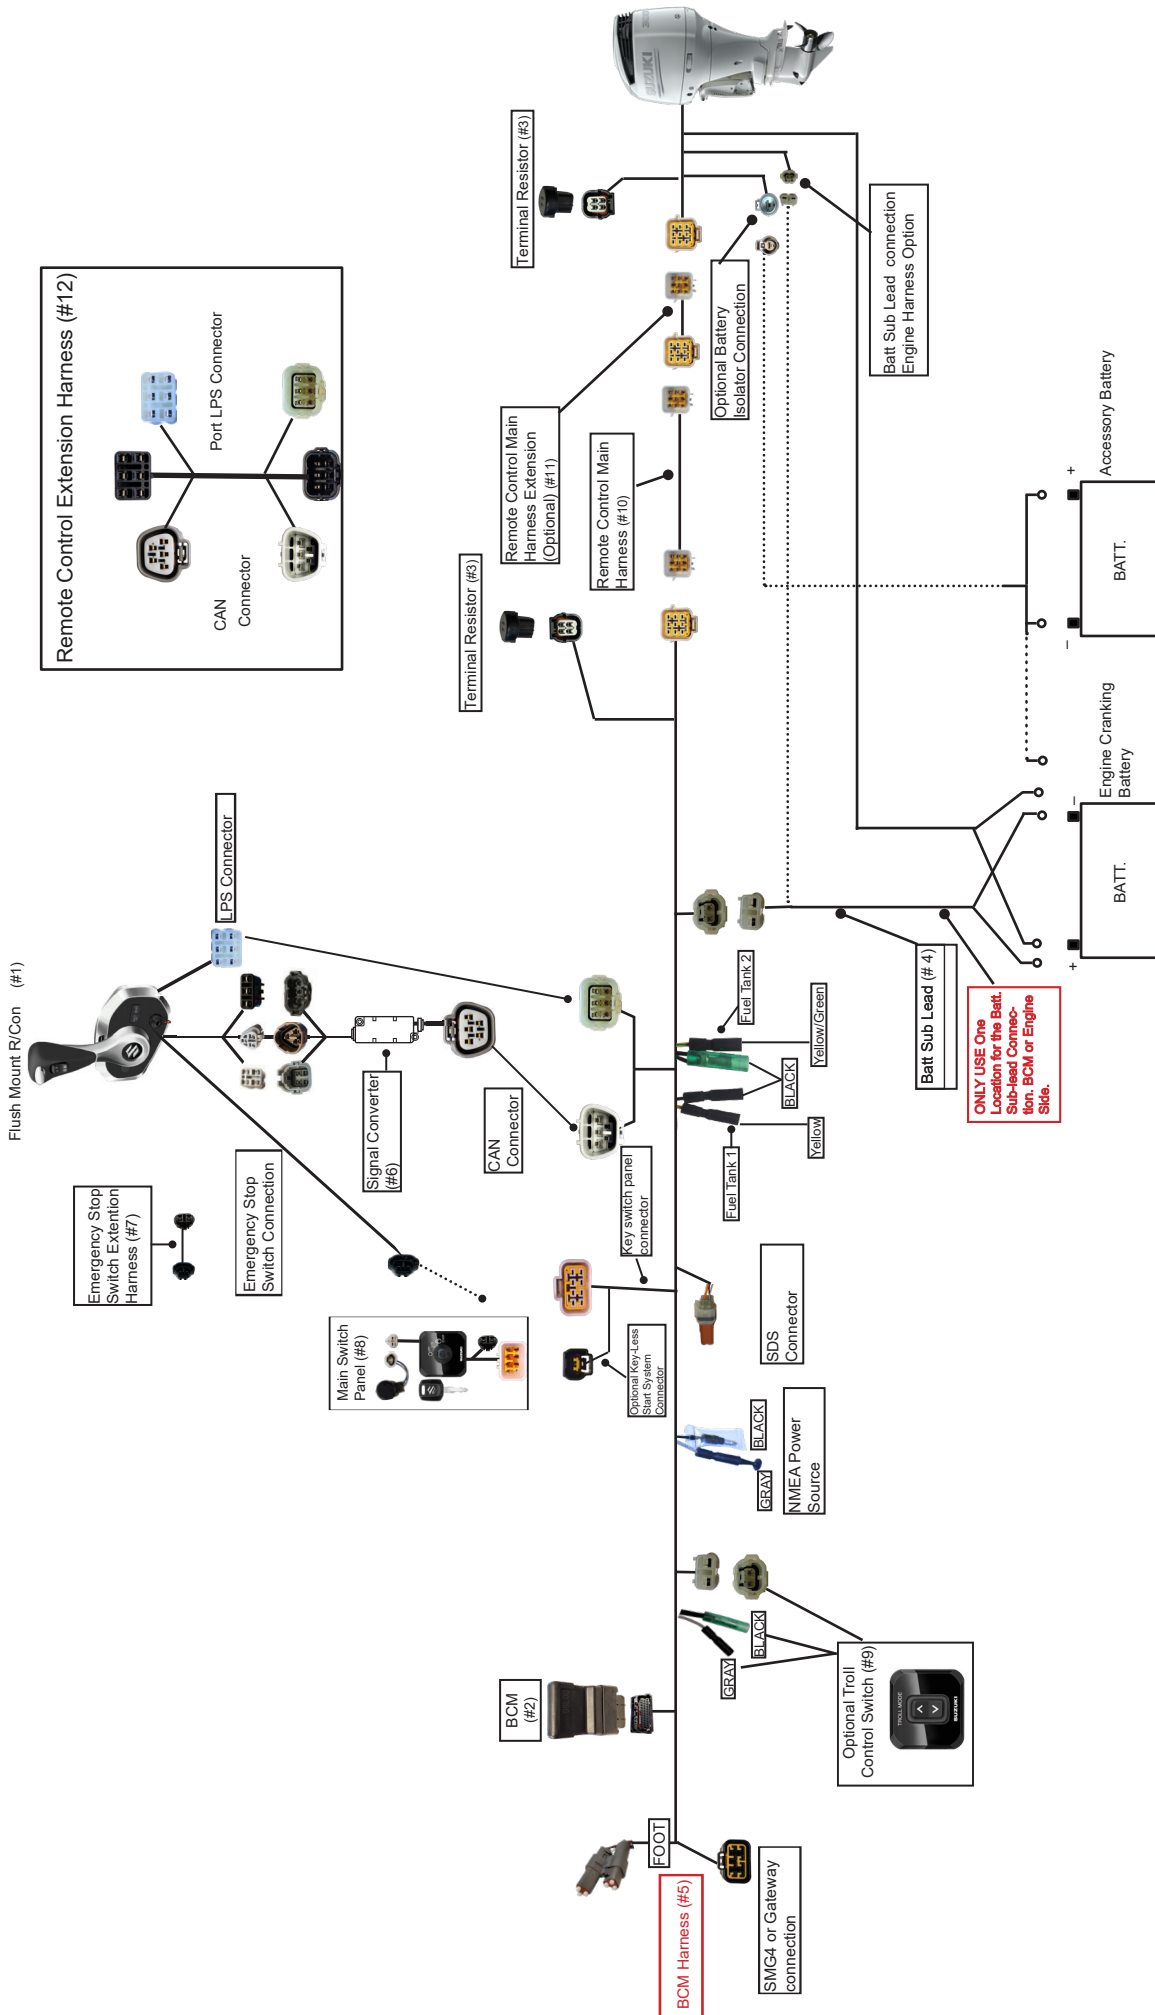


Single Engine Single Station Flush Mount

New	No	Part No.	Part Name	Qty	KIT (67000-98L10)
☆	1	67200-98L20	R/CON ASSY, FLUSH MOUNT	1	1
☆	2	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	1	1
		33925-98L00	CUSHION, BCM	1	1
		36775-98L00	HOLDER, BCM (F)	1	1
		36776-98L00	HOLDER, BCM (R)	1	1
☆	3	33926-98L00	RESISTOR, TERMINAL	2	2
		36625-98J10	WIRE ASSY, BATTERY	1	1
☆	5	36623-98L00	HARNESS ASSY, BCM NO.1 SNGL	1	1
☆	6	37140-98L00	UNIT COMP, SIGNAL CONVERTER	1	1
☆	7	36627-98L10	HARNESS ASSY,EM SWITCH EXT (1.5m)	1	1
	-	09403-13402	HARNESS CLAMP	10	10
☆	8	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1	-
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ		
		37100-98L00	PANEL ASSY, MAIN SWITCH		
		37803-98L00	PANEL ASSY, EMERGENCY SW	*	-
☆	9	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	-
☆	10	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	1	-
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)		
☆	11	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	*	-
☆	12	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**	-

* Part is required when installing 37100-98L00

** Part is required when harness needs to be extended

DUAL ENGINES - SINGLE STATION

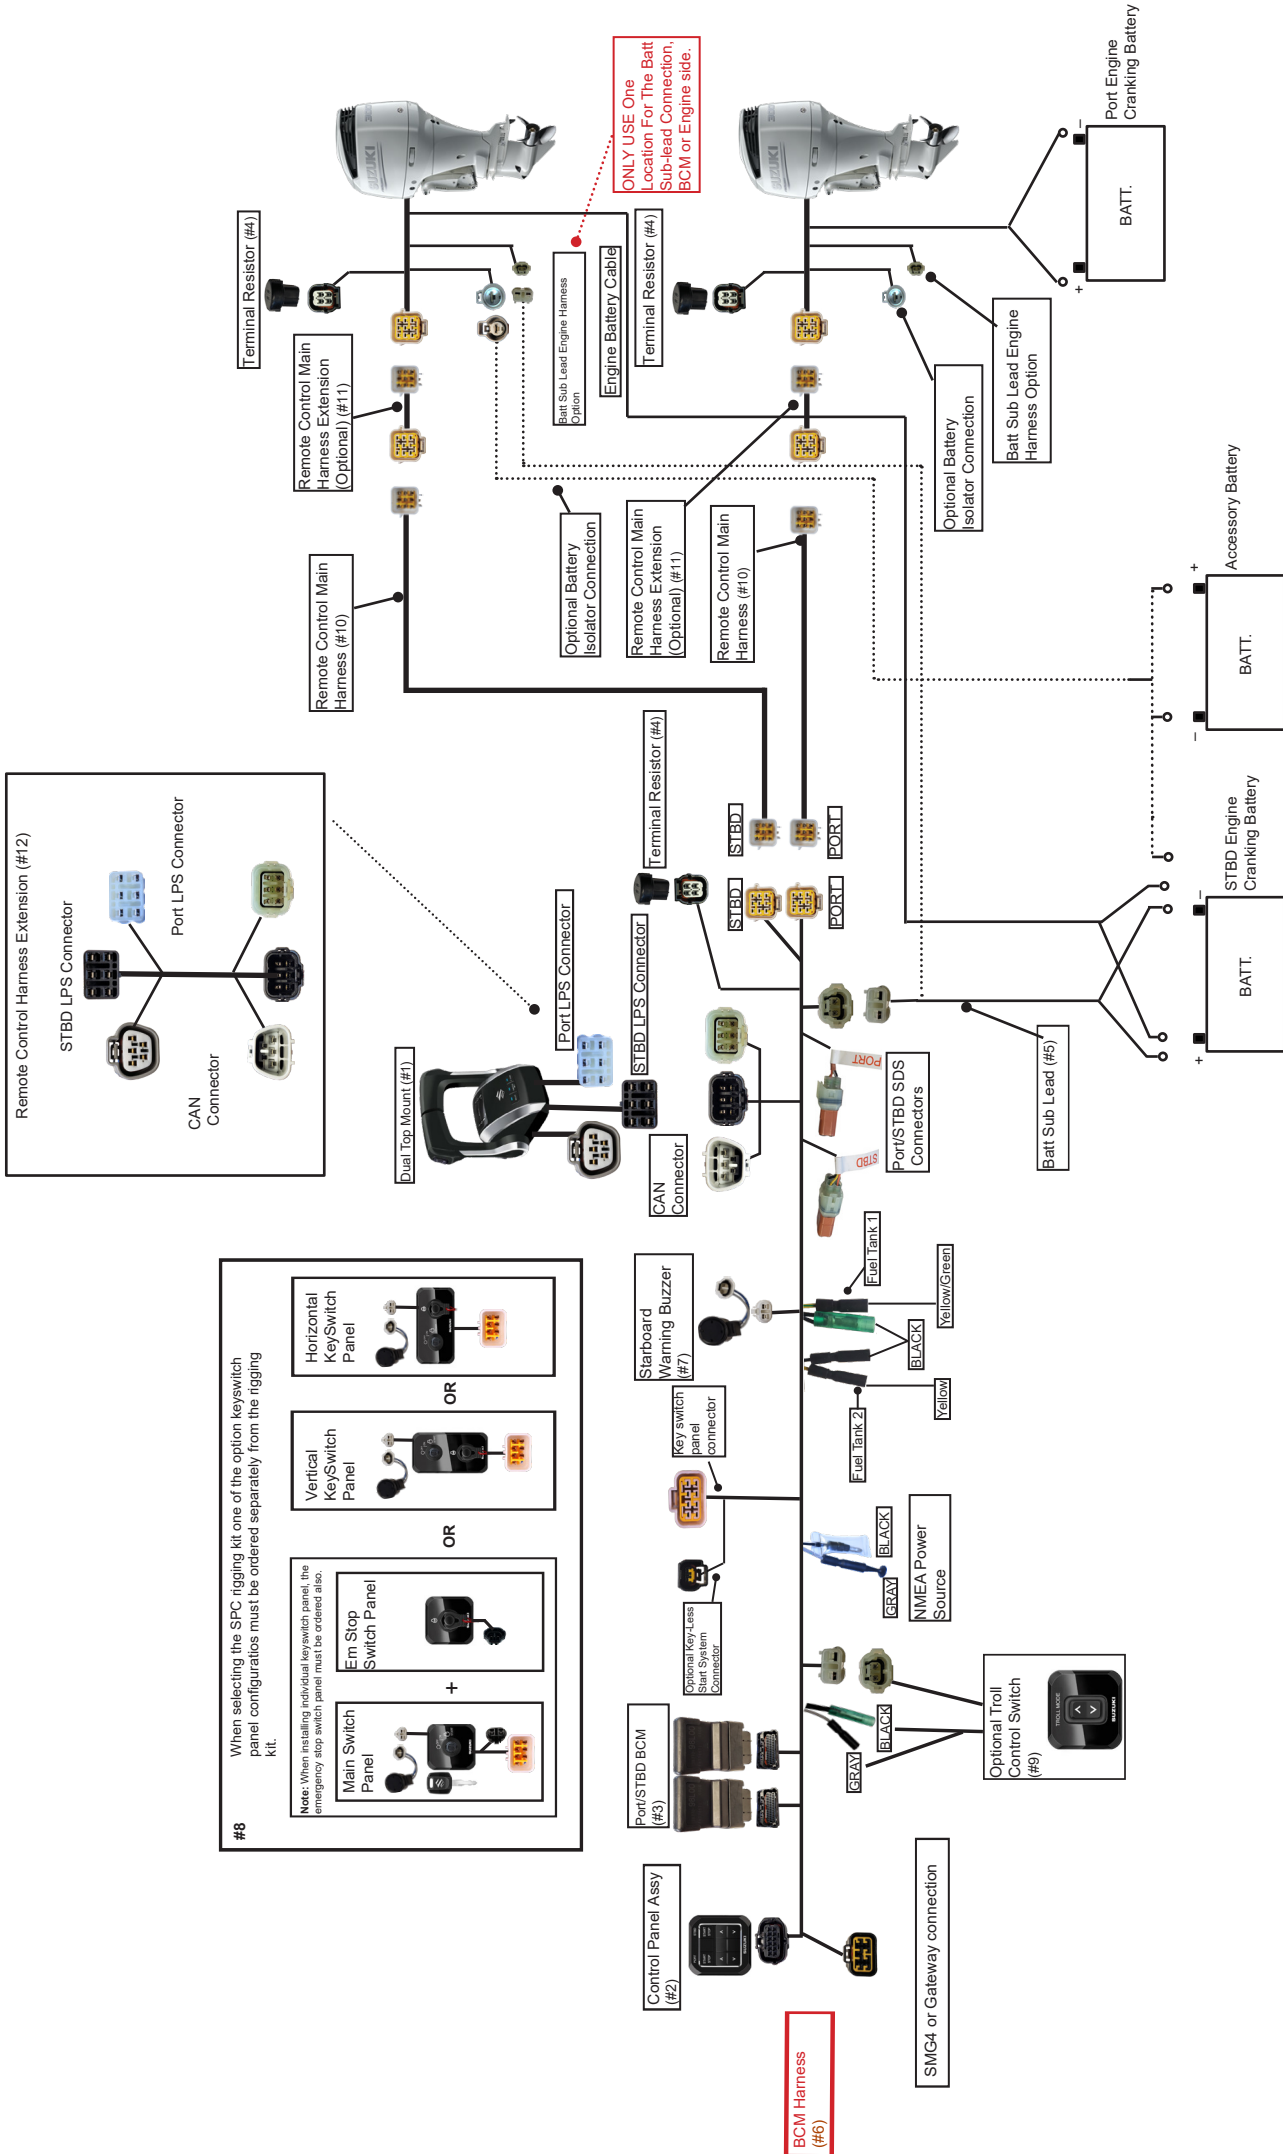


Dual Engines Single Station

New	No.	Part No.	Part Name	Qty	KIT(67000-98L20)
☆	1	67200-98L10	R/CON ASSY, MULTIPLE TOP MOUNT	1	1
☆	2	37120-98L00	PANEL ASSY, DUAL	1	1
☆	3	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	2	2
		33925-98L00	CUSHION, BCM	2	2
		36775-98L00	HOLDER, BCM (F)	2	2
☆	4	36776-98L00	HOLDER, BCM (R)	2	2
		33926-98L00	RESISTOR, TERMINAL	3	3
	5	36625-98J10	WIRE ASSY, BATTERY	1	1
☆	6	36623-98L30	HARNESS ASSY, BCM NO.1 MULTI	1	1
	7	38500-93J90	BUZZER ASSY, WARNING	1	1
		09407-08401	CLAMP, BUZZER	1	1
	-	09403-13402	HARNESS CLAMP	15	15
☆	8	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1	-
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ		
		37100-98L00	PANEL ASSY, MAIN SWITCH		
		37803-98L00	* PANEL ASSY, EMERGENCY SW	*	
☆	9	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	-
☆	10	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	2	-
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)		
☆	11	36620-98L20	* WIRE ASSY, REMOTE CONTROL EXT (2m)	**	-
☆	12	36627-98L00	* HARNESS COMP, R/CON EXT (1m)	**	-

* Part is required when installing 37100-98L00

**Part is required when harness needs to be extended

TRIPLE ENGINES - SINGLE STATION

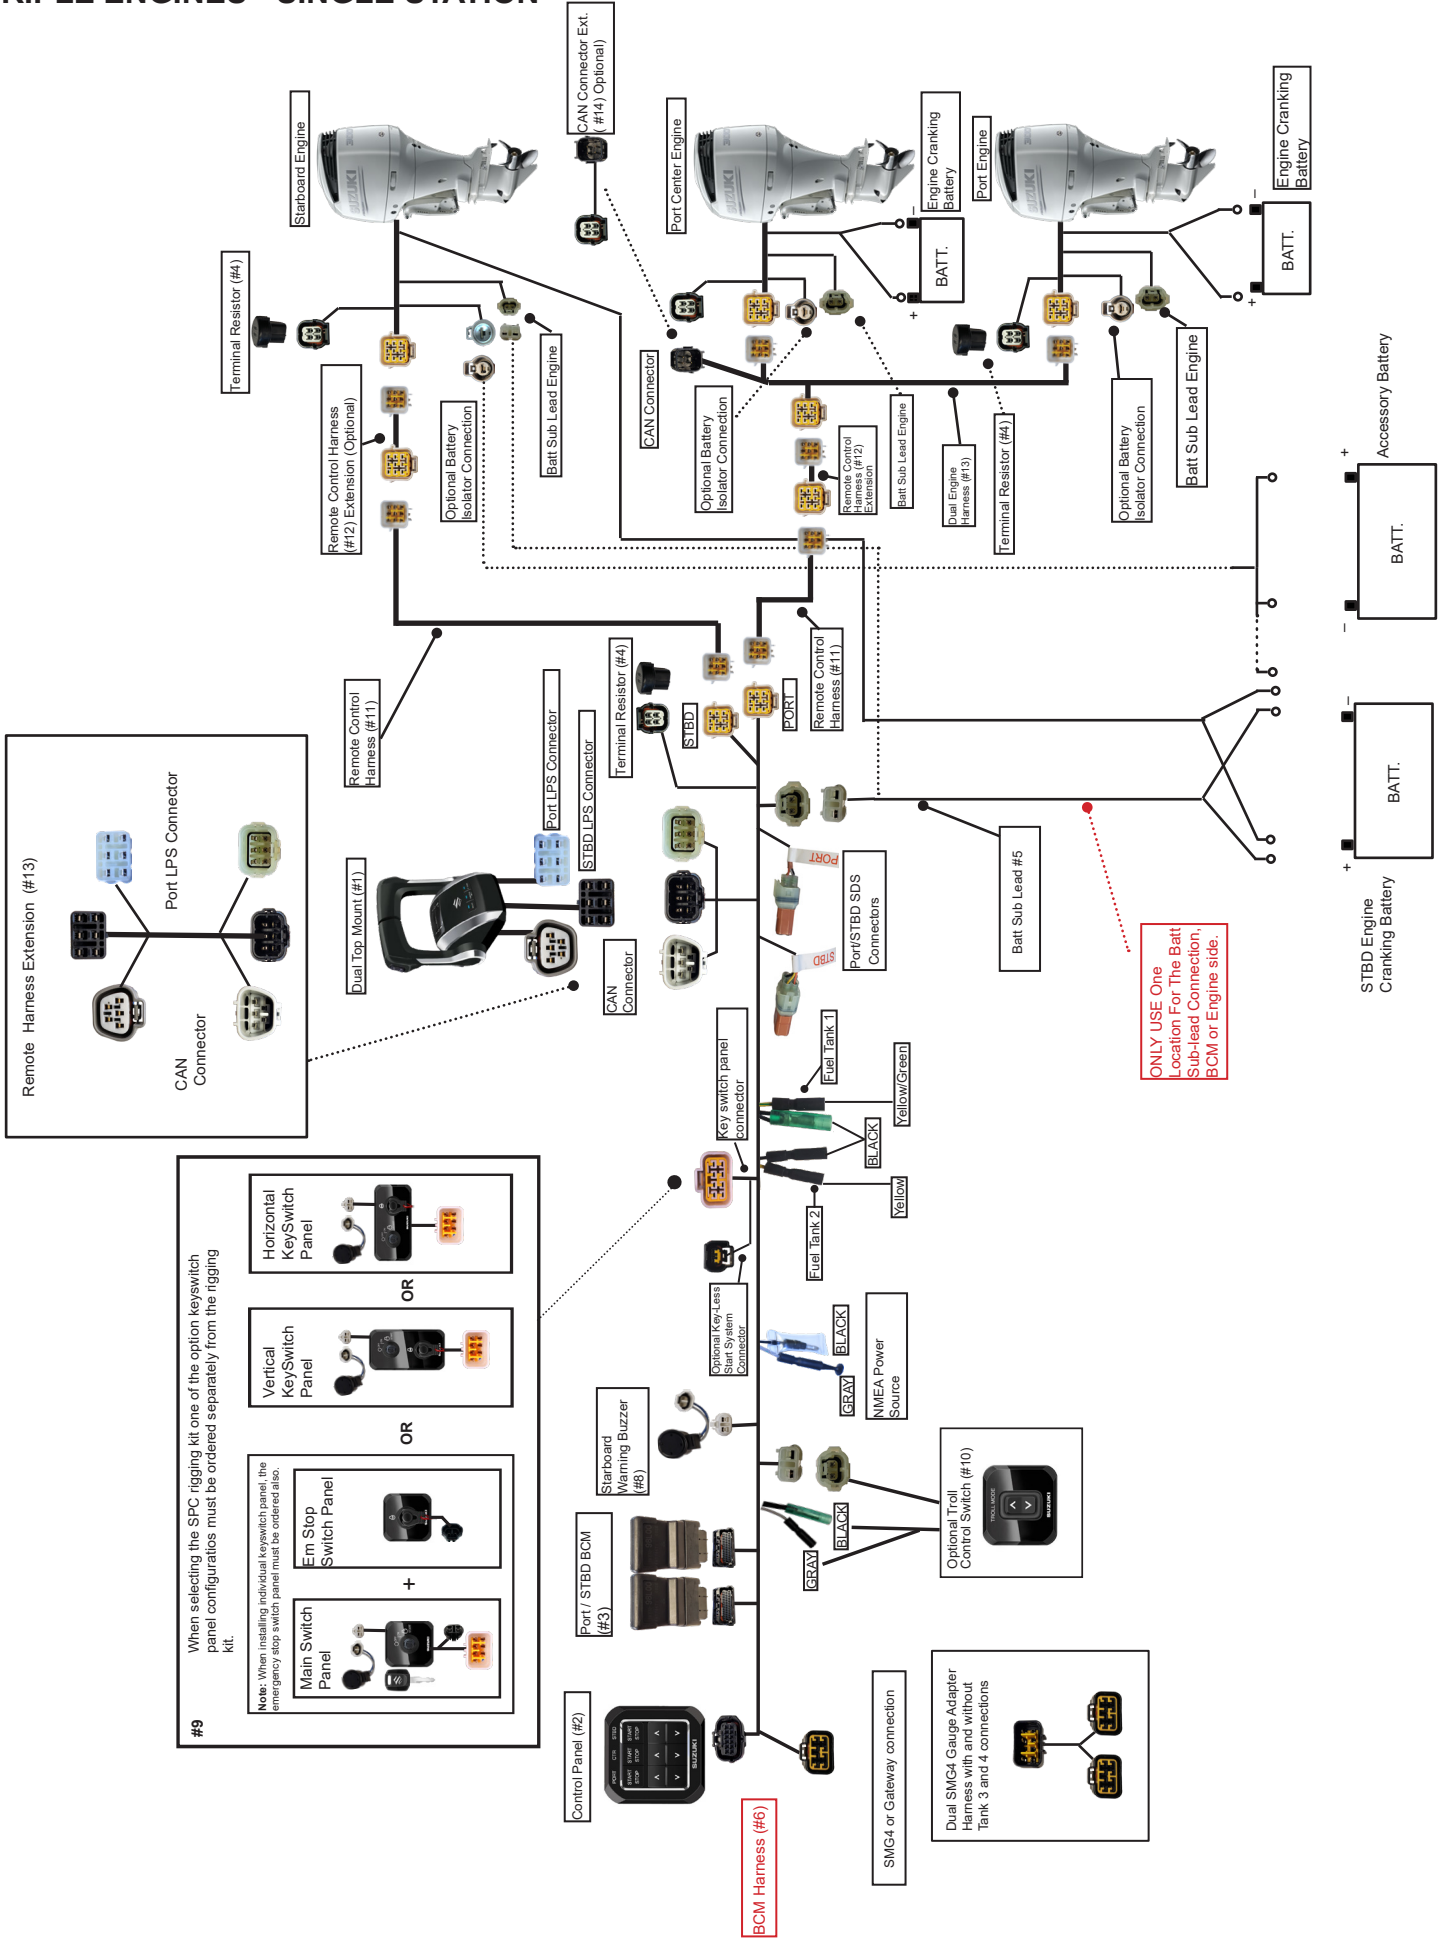


Triple Engines Single Station

New	No.	Part No.	Part Name	Qty	KIT(67000-98L30)
☆	1	67200-98L10	R/CON ASSY, MULTIPLE TOP MOUNT	1	1
☆	2	37120-98L10	PANEL ASSY, TRIPLE	1	1
☆	3	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	2	2
		33925-98L00	CUSHION, BCM	2	2
		36775-98L00	HOLDER, BCM (F)	2	2
☆	4	36776-98L00	HOLDER, BCM (R)	2	2
		33926-98L00	RESISTOR, TERMINAL	3	3
☆	5	36625-98J10	WIRE ASSY, BATTERY	1	1
☆	6	36623-98L30	HARNESS ASSY, BCM NO.1 MULTI	1	1
☆	7	36621-98L00	HARNESS ASSY, DUAL ENGINE	1	1
	8	38500-93J90	BUZZER ASSY, WARNING	1	1
		09407-08401	CLAMP, BUZZER	1	1
	-	09403-13402	HARNESS CLAMP	18	18
☆	9	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1	-
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ		
		37100-98L00	PANEL ASSY, MAIN SWITCH		
☆	10	37803-98L00	PANEL ASSY, EMERGENCY SW	*	-
☆	11	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	-
☆	11	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	2	-
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)		
☆	12	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	**	
☆	13	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**	-
☆	14	36627-98L20	HARNESS COMP, CAN EXT (2m)	**	-

* Part is required when using 37100-98L00

** Part is required when harness needs to be extended

QUAD ENGINES - SINGLE STATION

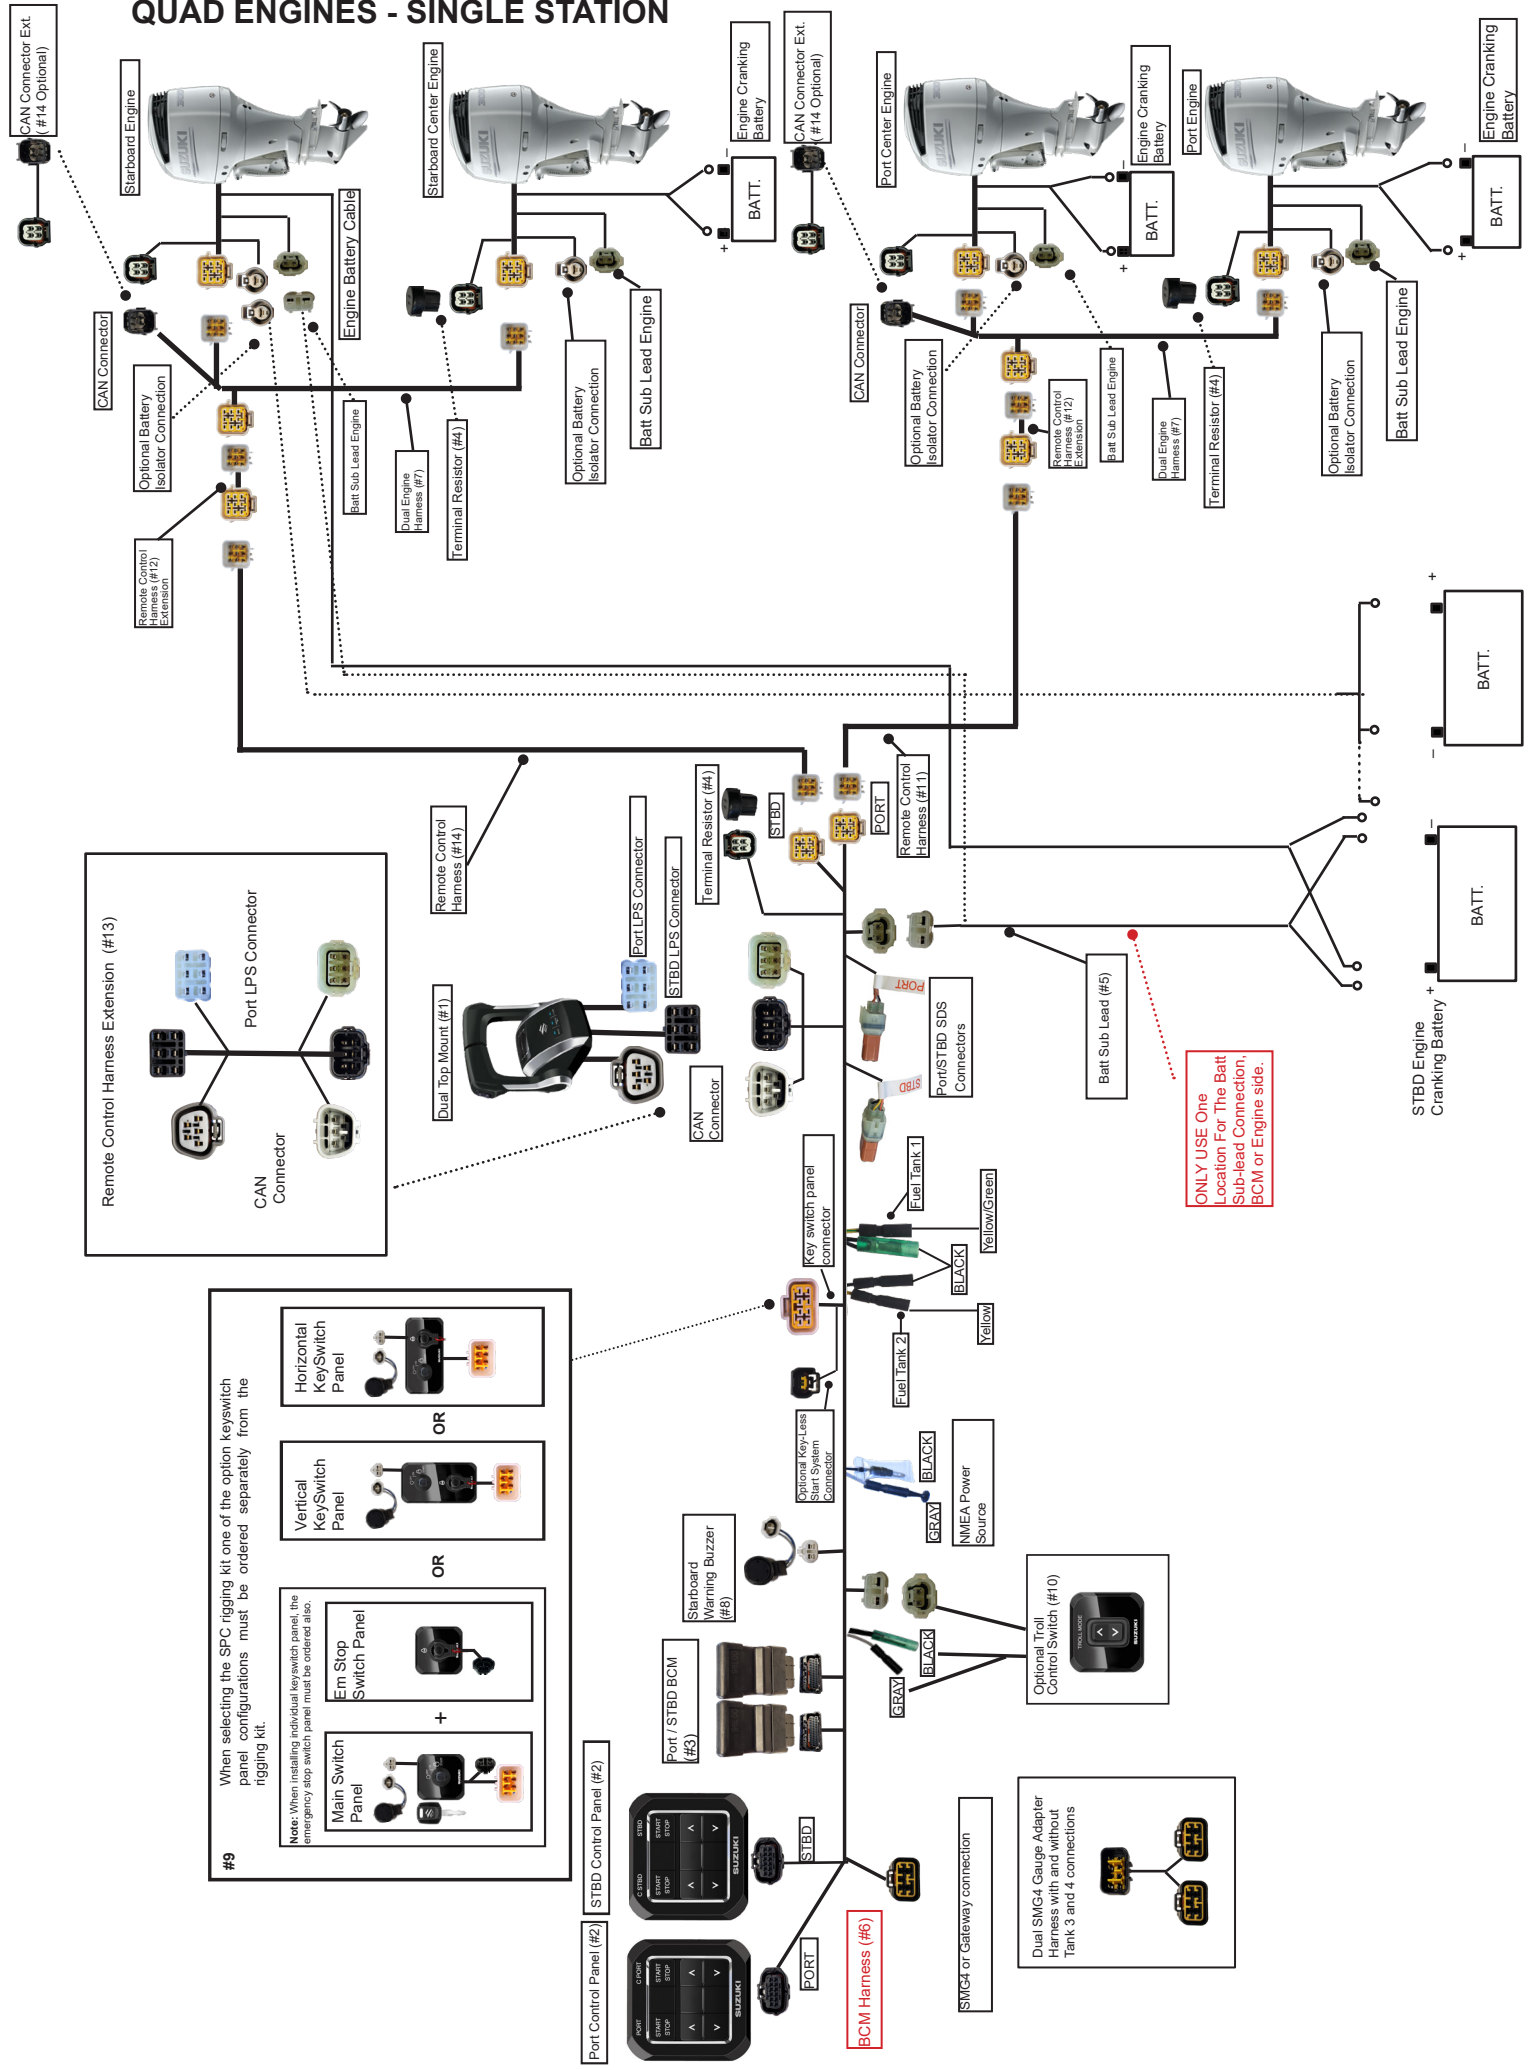

Quad Engines Single Station

New	No.	Part No.	Part Name	Qty	KIT(67000-98L40)
☆	1	67200-98L10	R/CON ASSY, MULTIPLE TOP MOUNT	1	1
☆	2	37120-98L20	PANEL ASSY, QDRPL PORT	1	1
		37120-98L30	PANEL ASSY, QDRPL STBD	1	1
☆	3	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	2	2
		33925-98L00	CUSHION, BCM	2	2
		36775-98L00	HOLDER, BCM (F)	2	2
		36776-98L00	HOLDER, BCM (R)	2	2
☆	4	33926-98L00	RESISTOR, TERMINAL	3	3
	5	36625-98J10	WIRE ASSY, BATTERY	1	1
☆	6	36623-98L40	HARNESS ASSY, BCM NO.1 QDRPL	1	1
☆	7	36621-98L00	HARNESS ASSY, DUAL ENGINE	2	2
	8	38500-93J90	BUZZER ASSY, WARNING	1	1
		09407-08401	CLAMP, BUZZER	1	1
	-	09403-13402	HARNESS CLAMP	20	20
☆	9	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1	-
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ		
		37100-98L00	PANEL ASSY, MAIN SWITCH		
☆	10	37803-98L00	PANEL ASSY, EMERGENCY SW	*	
		37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	-
☆	11	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	2	-
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)		
☆	12	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	**	
☆	13	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**	-
☆	14	36627-98L20	HARNESS COMP, CAN EXT (2m)	**	-

* Part is required when using 37100-98L00 / 37290-98L00

** Part is required when harness needs to be extended

Quintuple Engines Single Station

New	No.	Part No.	Part Name	Qty
☆	1	67200-98L10	R/CON ASSY, MULTIPLE TOP MOUNT	1
☆	2	37120-98L30	PANEL ASSY, QDRPL STBD	1
		37120-98L40	PANEL ASSY, QUINTUPLE	1
		36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	2
☆	3	33925-98L00	CUSHION, BCM	2
		36775-98L00	HOLDER, BCM (F)	2
		36776-98L00	HOLDER, BCM (R)	2
☆	4	33926-98L00	RESISTOR, TERMINAL	3
		36625-98J10	WIRE ASSY, BATTERY	1
☆	6	36623-98L40	HARNESS ASSY, BCM NO.1 QDRPL	1
☆	7	36621-98L00	HARNESS ASSY, DUAL ENGINE	3
		38500-93J90	BUZZER ASSY, WARNING	1
		09407-08401	CLAMP, BUZZER	1
	-	09403-13402	HARNESS CLAMP	20
		37100-98L10	PANEL ASSY, MAIN SWITCH VERT	
☆	9	37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ	1
		37100-98L00	PANEL ASSY, MAIN SWITCH	
		37803-98L00	PANEL ASSY, EMERGENCY SW	*
☆	10	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1
☆	11	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	2
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)	
☆	12	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	**
☆	13	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**
☆	14	36627-98L20	HARNESS COMP, CAN EXT (2m)	**

* Part is required when using 37100-98L00

** Part is required when harness needs to be extended

Sextuple Engines Single Station

New	No.	Part No.	Part Name	Qty
☆	1	67200-98L10	R/CON ASSY, MULTIPLE TOP MOUNT	1
☆	2	37120-98L50	PANEL ASSY, SEXTUPLE PORT	1
		37120-98L60	PANEL ASSY, SEXTUPLE STBD	1
☆	3	36770-98L00	CONTROLLER ASSY, BOAT ELECTRIC	2
		33925-98L00	CUSHION, BCM	2
		36775-98L00	HOLDER, BCM (F)	2
		36776-98L00	HOLDER, BCM (R)	2
☆	4	33926-98L00	RESISTOR, TERMINAL	3
	5	36625-98J10	WIRE ASSY, BATTERY	1
☆	6	36623-98L40	HARNESS ASSY, BCM NO.1 QDRPL	1
☆	7	36621-98L00	HARNESS ASSY, DUAL ENGINE	4
	8	38500-93J90	BUZZER ASSY, WARNING	1
		09407-08401	CLAMP, BUZZER	1
	-	09403-13402	HARNESS CLAMP	20
☆	9	37100-98L10	PANEL ASSY, MAIN SWITCH VERT	1
		37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ	
		37100-98L00	PANEL ASSY, MAIN SWITCH	
		37803-98L00	PANEL ASSY, EMERGENCY SW	*
☆	10	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1
☆	11	36620-98L00	WIRE ASSY, REMOTE CONTROL (6.5m)	2
		36620-98L10	WIRE ASSY, REMOTE CONTROL (9.5m)	
☆	12	36620-98L20	WIRE ASSY, REMOTE CONTROL EXT (2m)	**
☆	13	36627-98L00	HARNESS COMP, R/CON EXT (1m)	**
☆	14	36627-98L20	HARNESS COMP, CAN EXT (2m)	**

* Part is required when using 37100-98L00

** Part is required when harness needs to be extended